





# DIY INSTALLATION


## BLADE SIGNS

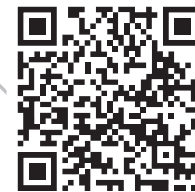


DIY  
INSTALL  
VIDEOS  
SCAN  
HERE

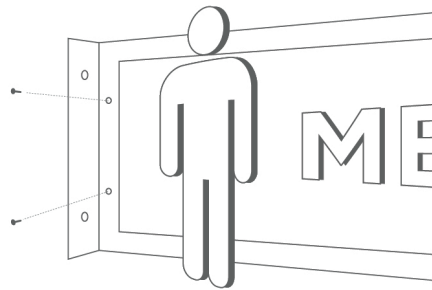


**1** ATTACH WALL MOUNT BRACKET  
TO SIGN USING SET SCREWS

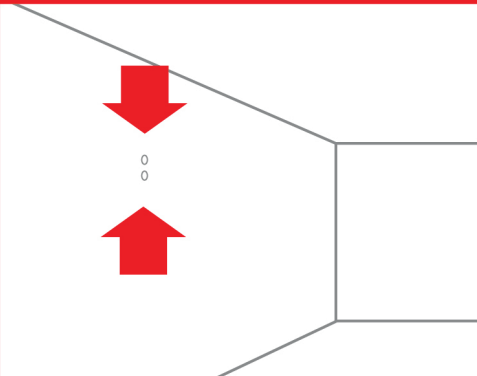


**2** DETERMINE LOCATION  
& DESIRED HEIGHT FROM  
THE FLOOR SURFACE

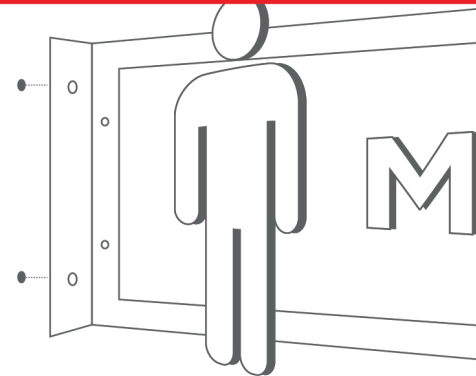


**3** USE INCLUDED BRACKET TO  
MARK HOLE POSITION  
ON THE WALL

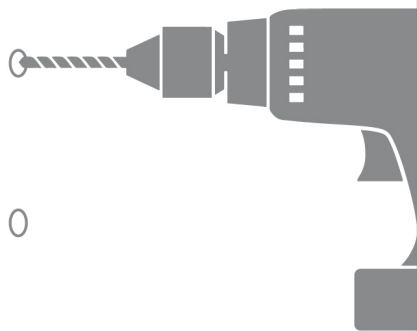

**4** ON MARKED HOLES  
PRE-DRILL ANCHOR HOLE

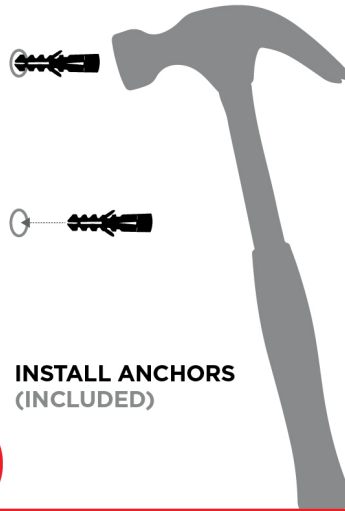

**5** INSTALL ANCHORS  
(INCLUDED)

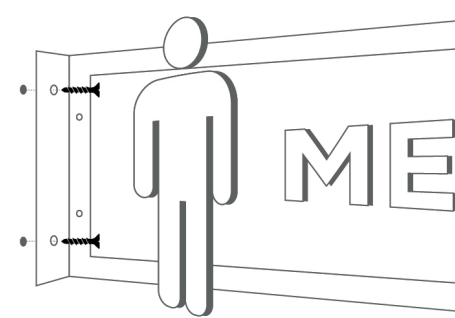

**6** ATTACH SIGN TO WALL

VISIT [WWW.AISLESIGNDUDE.COM](http://WWW.AISLESIGNDUDE.COM) FOR OUR PRO INSTALL SERVICES



PRO SERVICES